

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
Fusible Switches for New 200A	
FD200J3	CFD200J03
FD200J4	CFD200J04
Pistol Handles for New 200A Fusible Switch (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDH112	
BDH113	BDH58 (2.6 in length)
BDH114	BDH59 (2.6 in length)
BDH115	BDH60 (3.1 in length)
BDH116	BDH61 (3.1 in length)
BDH117	
CDHXB12	
CDHXY12	CDHXB86
CDHXB22	CDHXY86
CDHXY22	
BDH8	No Longer Available. Select alternate handle.
Direct Mount Handle for New Fusible 200A Switch	
Not available on legacy model	CDHSB20
Not available on legacy model	CDHSY20
Shafts for New Fusible 200A Switch (Please consult catalog for mounting depths and for help selecting appropriate replacement part from list below)	
BDS220	
BDS250	BDS150
BDS280	BDS210
BDS325	BDS290
BDS395	BDS360
BDS465	BDS430
BDS535	
Twisted Shafts for New Fusible 200A Switch (Please consult catalog for mounting depths and for help selecting appropriate replacement part from list below)	
BDS28045	BDST4
BDS32545	BDST25
BDS46545	BDST29
	BDST30

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
Terminal Lug Kits for New Fusible 200A Switch	
BDTL25	CDTL200
	CDTL200/3P
BDTL175	CDTL206
"T" Type Fuse Adapter Kit for New Fusible 200A Switch	
BDTA2	No Longer Available
Auxiliary Contacts for New Fusible 200A Switch (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDAUX1	
BDAUX2	CDAUX10
BDAUX3	CDAUX01K
BDAUX4	CDAUXM28 (Module for mounting additional auxiliary contacts)
BDAUX5	
BDAUX6	
Fuse Covers (replacement parts) for New 200A Fusible Switch	
BDZX190	CFCVR200
BDZX191	CPBR200
Fuse Cover Interlock for New 200A fusible Switch	
BDZX204	No Longer Available
Terminal Shroud for New 200A Fusible Switch (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDT5F2	CDSS200L3
	CDSS200S3
	CDSS200L4
	CDSS200S4
Terminal Pole for New 200A Fusible Switch	
BDTP85	CDD200P
Locking Accessories for New 200A Fusible Switch	
CDETL-ZW5	CDETL-ZW16
Shaft Extension Coupler for New 200A Fusible Switch	
BDZW95	BDZX167
	BDZX95
Shaft Adapter for New 200A Fusible Switch	
Not available on legacy model	CDZK19
Conversion Mechanisms for New 200A Fusible Switch	
BDZW9	BDZW2

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
Non-Fusible Switches 200A	
BDNF175A	Upgrade to CDNF200U03
BDNF200A	CDNF200U03
BDNF175A4	Upgrade to CDNF200U04
BDNF200A4	CDNF200U04
Pistol Handles for 175-200A Non-Fusible Switches (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDH108	
BDH109	BDH60 (3.1 in length)
BDH110	BDH61 (3.1 in length)
BDH111	
CDHXB88	CDHXB86 (3.1 in length)
CDHXY88	CDHXY86 (3.1 in length)
Shafts for 175-200A Non-Fusible Switches A115 (Please consult catalog for mounting depths and for help selecting appropriate replacement part from list below)	
	BDS130
BDS140	BDS150
BDS240	BDS210
BDS340	BDS290
BDS500	BDS360
	BDS430
Twisted Shafts for 175-200A Non-Fusible Switches (Please consult catalog for mounting depths and for help selecting appropriate replacement part from list below)	
CDS340T	BDST4
	BDST25
	BDST29
	BDST30
Direct Mount Handles for 175-200A Non-Fusible Switches	
Not available on legacy model	CDHTB20
Not available on legacy model	CDHTY20
Terminal Lug Kits for 175-200A Non-Fusible Switches	
BDTL25	CDTL200
BDTL253P	CDTL200/3P
BDTL175	CDTL206

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
Auxiliary Contacts for 175-200A Non-Fusible Switches (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDAUX12	
BDAUX13	
BDAUX16	CDAUX10
BDAUX14	CDAUX01K
BDAUX15	CDAUXM28 (Module for mounting additional auxiliary contacts)
BDAUX17	
Terminal Poles for 175-200A Non-Fusible Switches	
BDZX129	CDD200P
Terminal Shroud for 175-200A Non-Fusible Switches (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDTS2	CDTS250G1L/3
	CDTS250G1S/3
	CDTS250G1L/4
	CDTS250G1S/4
Handle Support Bracket for 175-200A Non-Fusible Switches	
BDZX131	No Longer Available--Replaced by Direct Mount Handle (CDHTB20, CDHTY20)
Locking Accessories for 175-200A Non-Fusible Switches	
CDETL-ZW16	CDETL-ZW16
Shaft Extension Coupler for 175-200A Non-Fusible Switches	
BDZW95	BDZX167
	BDZX95
Shaft Adapter for 175-200A Non-Fusible Switches	
CDZT123	CDZK19
Conversion Mechanisms for 175-200A Non-Fusible Switches	
BDZW18	BDZW2
BDZW20	CDZW25
BDZW20X	CDZW25X
BDZW21	CDZW26
BDZW21X	CDZW26
BDZW19	CDZW10
New 400A Non-Fusible Switches	
BDNF400	CDNF400U03
BDNF4004	CDNF400U04

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
Pistol Handles for New 400A Non-Fusible Switches (No changes from previous model.)	
BDH112	BDH112
BDH113	BDH113
BDH114	BDH114
BDH115	BDH115
BDH116	BDH116
BDH117	BDH117
CDHXB12	CDHXB12
CDHXY12	CDHXY12
CDHXB22	CDHXB22
CDHXY22	CDHXY22
BDH8	BDH8
Shafts for New 400A Non-Fusible Switches (No changes from previous model.)	
BDS280	BDS280
BDS325	BDS325
BDS395	BDS395
BDS465	BDS465
BDS535	BDS535
Twisted Shafts for New 400A Non-Fusible Switches (No changes from previous model.)	
BDS28045	BDS28045
BDS32545	BDS32545
BDS46545	BDS46545
Direct Mount Handles for New 400A Non-Fusible Switches	
Not available on legacy model	CDHTB40
Not available on legacy model	CDHTY40
Terminal Lug Kits for New 400A Non-Fusible Switches (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDTL26	
BDTL262	
BDTL27	CDTL400
BDTL30	CDTL400/3P
BDTL32	CDTL406
BDTL175/400	

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
Auxiliary Contacts for New 400A Non-Fusible Switches (Please select one of the multiple replacement parts offered and refer to the catalog for specifics.)	
BDAUX1	
BDAUX2	CDAUX10
BDAUX3	CDAUX01K
BDAUX4	CDAUXM28 (Module for mounting additional auxiliary contacts)
BDAUX5	
BDAUX6	
Terminal Shroud for New 400A Non-Fusible Switches	
BDTS4	CDTS403
Locking Accessories for New 400A Non-Fusible Switches (No changes from previous model.)	
CDETL-ZW5	CDETL-ZW5
Shaft Extension Coupler for New 400A Non-Fusible Switches (No changes from previous model.)	
BDZW95	BDZW95
Conversion Mechanisms for New 400A Non-Fusible Switches (No changes from previous model.)	
BDZW12	BDZW12
BDZW13	BDZW13
BDZW3	BDZW3
BDZW14	BDZW14
BDZW15	BDZW15

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
New Enclosed Disconnect Switches and Accessories	
New 200A Enclosed Fusible Disconnect Switches and Accessories	
EFJ2001-3PB4	EFJ2001-3PB8C
EFJ2001-4PB4	EFJ2001-4PB8C
EFJ2002-3PB4	EFJ2002-3PB8C
EFJ2002-4PB4	EFJ2002-4PB8C
EFJ2003-3PB4	EFJ2003-3PB8C
EFJ2003-4PB4	EFJ2003-4PB8C
EFJ2004-3PB4	EFJ2004-3PB8C
EFJ2004-4PB4	EFJ2004-4PB8C
EFJ200P-3PB4	EFJ200P-3PB8C
EFJ200P-4PB4	EFJ200P-4PB8C
EFJ200X-3PB4	EFJ200X-3PB8C
EFJ200X-4PB4	EFJ200X-4PB8C
New 200A and 400A Enclosed Non-Fusible Disconnect Switches and Accessories	
ENF2001-3MB8	ENF2001-3MB8B
ENF2001-3PB8	ENF2001-3PB8B
ENF2001-3TB4	ENF2001-3TB4B
ENF2001-4PB8	ENF2001-4PB8B
ENF2001-6PB4	ENF2001-6PB4B
ENF2002-3MB8	ENF2002-3MB8B
ENF2002-3PB8	ENF2002-3PB8B
ENF2002-3PB810	ENF2002-3PB8B10
ENF2002-3PB811	ENF2002-3PB8B11
ENF2002-3TB4	ENF2002-3TB4B
ENF2002-4PB8	ENF2002-4PB8B
ENF2002-6PB4	ENF2002-6PB4B
ENF2003-3MB8	ENF2003-3MB8B
ENF2003-3PB8	ENF2003-3PB8B
ENF2003-3PB811	ENF2003-3PB8B10
ENF2003-3TB4	ENF2003-3PB8B11
ENF2003-4PB8	ENF2003-3TB4B
ENF2003-4TB4	ENF2003-4PB8B
ENF2003-6PB4	ENF2003-6PB4B
ENF2004-3MB8	ENF2004-3MB8B
ENF2004-3PB8	ENF2004-3PB8B
ENF2004-3TB4	ENF2004-3TB4B

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
ENF2004-4PB8	ENF2004-4PB8B
ENF2004-6PB4	ENF2004-6PB4B
ENF200P-3MB8	ENF200P-3MB8B
ENF200P-3PB8	ENF200P-3PB8B
ENF200P-3TB4	ENF200P-3TB4B
ENF200P-4PB8	ENF200P-4PB8B
ENF200P-6PB4	ENF200P-6PB4B
ENF200X-3MB8	ENF200X-3MB8B
ENF200X-3PB8	ENF200X-3PB8B
ENF200X-3PB811	ENF200X-3PB8B11
ENF200X-3PB8N	ENF200X-3PB8BN
ENF200X-3PY811	ENF200X-3PY8B11
ENF200X-3TB4	ENF200X-3TB4B
ENF200X-4PB8	ENF200X-4PB8B
ENF200X-6PB4	ENF200X-6PB4B
ENF200X-6PB411	ENF200X-6PB4B11
ENF4001-3B6	ENF4001-3B6B
ENF4001-3MB4	ENF4001-3MB4B
ENF4001-3PB4	ENF4001-3PB4B
ENF4001-3TB4	ENF4001-3TB4B
ENF4001-4PB4	ENF4001-4PB4B
ENF4001-6P8	ENF4001-6P8B
ENF4002-3B6	ENF4002-3B6B
ENF4002-3MB4	ENF4002-3MB4B
ENF4002-3PB4	ENF4002-3PB4B
ENF4002-3TB4	ENF4002-3TB4B
ENF4002-4PB4	ENF4002-4PB4B
ENF4002-6P8	ENF4002-6P8B
ENF4003-3B6	ENF4003-3B6B
ENF4003-3MB4	ENF4003-3MB4B
ENF4003-3PB4	ENF4003-3PB4B
ENF4003-3PB411	ENF4003-3PB4B11
ENF4003-3TB4	ENF4003-3TB4B
ENF4003-4PB4	ENF4003-4PB4B
ENF4003-6P8	ENF4003-6P8B
ENF4004-3B6	ENF4004-3B6B
ENF4004-3MB4	ENF4004-3MB4B
ENF4004-3PB4	ENF4004-3PB4B

Disconnect Switch Transition Cross-Reference Guide: 200A Fusible, 200A Non-fusible, and 400A Non-fusible

Old Part Number	New Part Number
Please select new handle, shaft, lug and accessory part numbers	
ENF4004-3TB4	ENF4004-3TB4B
ENF4004-4PB4	ENF4004-4PB4B
ENF4004-6P8	ENF4004-6P8B
ENF400P-3B6	ENF400P-3B6B
ENF400P-3MB4	ENF400P-3MB4B
ENF400P-3PB4	ENF400P-3PB4B
ENF400P-3PB411	ENF400P-3PB4B11
ENF400P-3TB4	ENF400P-3TB4B
ENF400P-4PB4	ENF400P-4PB4B
ENF400P-6P8	ENF400P-6P8B
ENF400X-3B6	ENF400X-3B6B
ENF400X-3MB4	ENF400X-3MB4B
ENF400X-3PB4	ENF400X-3PB4B
ENF400X-3TB4	ENF400X-3TB4B
ENF400X-4PB4	ENF400X-4PB4B
ENF400X-6P8	ENF400X-6P8B
For other enclosed configurations, please contact your Cooper Bussmann sales representative	